


Nistune Z32 ECU Modifications for R33 RB25DET Skyline Installation

Revision 7 – 18 Apr 2012

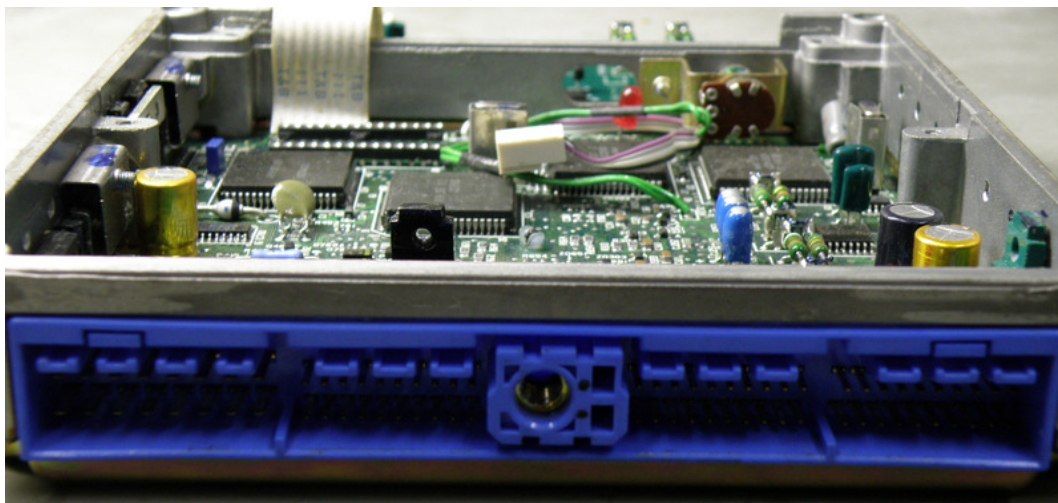

Thanks to Eric at DTA Motorsports, Skyline Stu and Andrew H for their help.

Overview

Fitting of the Z32 ECU is a functional and cost effective way to tune the R33 RB25DET Skyline when fitted with a NISTune board. The main ECU pin-outs are the same, so the Z32 ECU will actually plug into the R33 without modification.

There are some secondary signals which differ between the two ECU's. So for best integration into a standard R33 Skyline we've provided some basic instructions detailing the changes.

As a minimum it's recommended to do the resistor modification to correct the Fuel Temperature input – this will avoid incorrect fuel temperature measurements affecting the tune (see Section 5).

Instructions are for modifying the Z32 ECU for a direct R33 plug-in. This saves re-wiring the R33 harness - which means the standard ECU can easily be re-fitted if required. The same outcome may be realised by modifying the wiring harness if you'd rather not modify the ECU.

NISTune has provided a base image which consists of the Z32 base with R33 maps/tables merged. Files can be found in the NISTune ROM pack (from V3 onwards) under the Type 2/ECR33_RB25 folder (refer downloads section at www.nistune.com).

These files should provide a good starting point for tuning. Experience has shown that an RB25DET running the standard 370cc injectors and standard AFM will run quite well before any tuning even takes place.

Base images are configured for Series 1 R33 engines. Series 2 use a different airflow meter, so be sure to change the airflow meter in NISTune (Operations, Change Mass Airflow Meter) when you first connect to your ECU. Response curves for both airflow meters are very similar, so this should have minimal affect on the rest of the tune (K constant, load scales etc.).

Notes

1) The Z32 uses a switch on the TPS (Throttle Position Sensor) to sense closed throttle. R33 RB25 S1 does not. The Z32 ECU will use default "limp" values to determine TPS closed for idle calculations. This works quite effectively provided TPS is adjusted correctly.

2) We recommend Z32 (8 bit) ECU's for this modification. These can be any JDM , EDM or 1990-1992 USDM model ECU. It does not matter if the ECU is naturally aspirated or turbo, manual or auto. (Nissan part numbers 23710-30Pxx, 31Pxx, 37Pxx, 40Pxx, 41Pxx, 46Pxx, 47Pxx and 48Pxx).

Avoid later model USDM (1993-1996) 16 bit Z32 ECU's (Nissan part numbers 23710-45Pxx, 53Pxx, 51Pxx).

3) Note that most USDM Z32 ECU's are not stamped with a Nissan part number. However there is a manufacturer (JECS) part number which begins with A18. We can work out the Nissan part number if you contact us with the JECS part number, or you can connect to the ECU using any consult tool to retrieve the Nissan part number.

Instructions provided involve modifications to the ECU circuit board. Do not attempt this unless you are proficient in this type of work. No responsibility taken for information provided. Double check your work and continuity check all modifications on the ECU connector before using in the vehicle!

1) Knock Sensor inputs – pin 23/24

The R33 RB25 engine uses twin knock sensors with Nissan part number 22060-56S10 (shared with R32 RB20DET). Z32 VG30 only uses a single knock sensor but with different Nissan part number 22060-30P00 (shared with various SR20 engines).

RB25 knock sensor wires 23 (cylinder 1-3) and 24 (cylinder 4-6) go into the Z32 ECU however the Z32 ECU only uses a single knock sensor input, on pin 23.


After customer feedback we recommend only leaving a single knock sensor connected which will cover knock for part of the engine block

Otherwise we recommend stubbing out the knock sensor input by using a resistor to remove knock sensing input completely if during tuning the ECU appears to be oversensitive and pulling additional timing.

Stubbing out involves cutting the pin 23 knock sensor wire at the loom and soldering to a 470Kohm resistor between this wire and sensor ground (pin 30) on the ECCS harness.

2) O2 Sensor inputs – pin 29/55

RB25 uses a single O2 sensor. Z32 uses twin. Link the O2 sensor input for RB25 (pin 29) to pin 55 so both O2 sensor inputs (LHS and RHS) receive a signal. This avoids the potential condition of RHS bank being open circuit (and assigned a default value of 0.3 volts by the ECU) meaning a potentially lean condition.

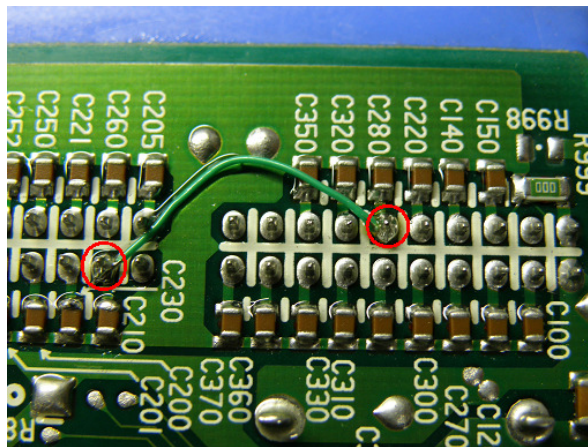

Link pins 29 - 55

7) Injectors/IGN signals

Swapping of injector/IGN signals is not required. Although the pin assignments on the ECU's are different, when the Z32 ECU is used with R33 RB25DET wiring loom, the injector banks correspond with the intended injection order. So no modification is required.


Supporting Data (Series 1 RB25DET)

SYSTEM OUTLINE

RB25DE / RB25DET ENGINE

2. ECCS CONTROL UNIT PIN LAYOUT (RB25DE / RB25DET)


10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	
109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149	150

 

Terminal No.	Description	Terminal No.	Description
1	IGN SIG (pwr transistor ctrl sig) Cyl. No. 1	11	IGN SIG (pwr transistor ctrl sig) Cyl. No. 6
2	IGN SIG (pwr transistor ctrl sig) Cyl. No. 5	12	IGN SIG (pwr transistor ctrl sig) Cyl. No. 2
3	IGN SIG (pwr transistor ctrl sig) Cyl. No. 3	13	IGN SIG (pwr transistor ctrl sig) Cyl. No. 4
4	AAC valve control signal	14	Engine A/T control input signal (DT2)(A/T)
5	Engine A/T control input signal (DT1)(A/T)	15	Engine A/T control input signal (DT3)(A/T)
6	-	16	ECCS relay
7	Engine rev signal for tachometer	17	Injection pulse (TI monitor) signal
8	-	18	Fuel pump relay
9	Air conditioner relay (A/C cut signal)	19	Power steering oil pressure SW signal
10	Earth (Ignition signal system)	20	Earth (Ignition signal system)
21(RX)	Receive (C/U data reception)	31(CLK)	Clock (synchronized signal)
22(TX)	Transmit (Data to C/U)	32	Engine warning lamp
23	Knock sensor signal 1 (Cyl. 1-3)	33	Exhaust temperature warning lamp
24	Knock sensor signal 2 (Cyl. 4-6)	34	-
25	Boost control solenoid sig (RB25DET only)	35	-
26	Air flow meter earth	36	-
27	Air flow meter intake air quantity signal	37	-
28	Engine coolant temperature sensor signal	38	Throttle sensor opening signal
29	Exhaust gas sensor signal	39	-
30	Earth (Sensor signal system)	40	-
41	Crank angle sensor 120° signal (REF sig)	51	Crank angle sensor 120° signal (REF sig)
42	Crank angle sensor 1° signal (POS sig)	52	Crank angle sensor 1° signal (POS sig)
43	Key SW START signal	53	Vehicle speed sensor
44	Neutral SW	54	-
45(IGN)	Key SW IGN signal	55	-
46	Air conditioner SW signal	56	Throttle opening output signal
47(CHK)	Check (diagnosis)	57	Exhaust temperature sensor signal
48	Throttle sensor power	58	Battery power
49	C/U power	59	C/U power
50	C/U earth	60(-)	C/U earth
101	Injector No.1	109	Inverse current feedback circuit
102	-	110	Injector No.5
103	Injector No.3	111	-
104	Fuel pump terminal power control output signal (FPCM)(RB25DET only)	112	Injector No.6
105	Injector No.2	113	Variable valve timing solenoid
106	-	114	Injector No.4
107	Injector ground	115	Exhaust gas sensor heater ground
108	Injector ground	116	Injector ground

ENGINE AND EMISSION CONTROL OVERALL SYSTEM

Circuit Diagram

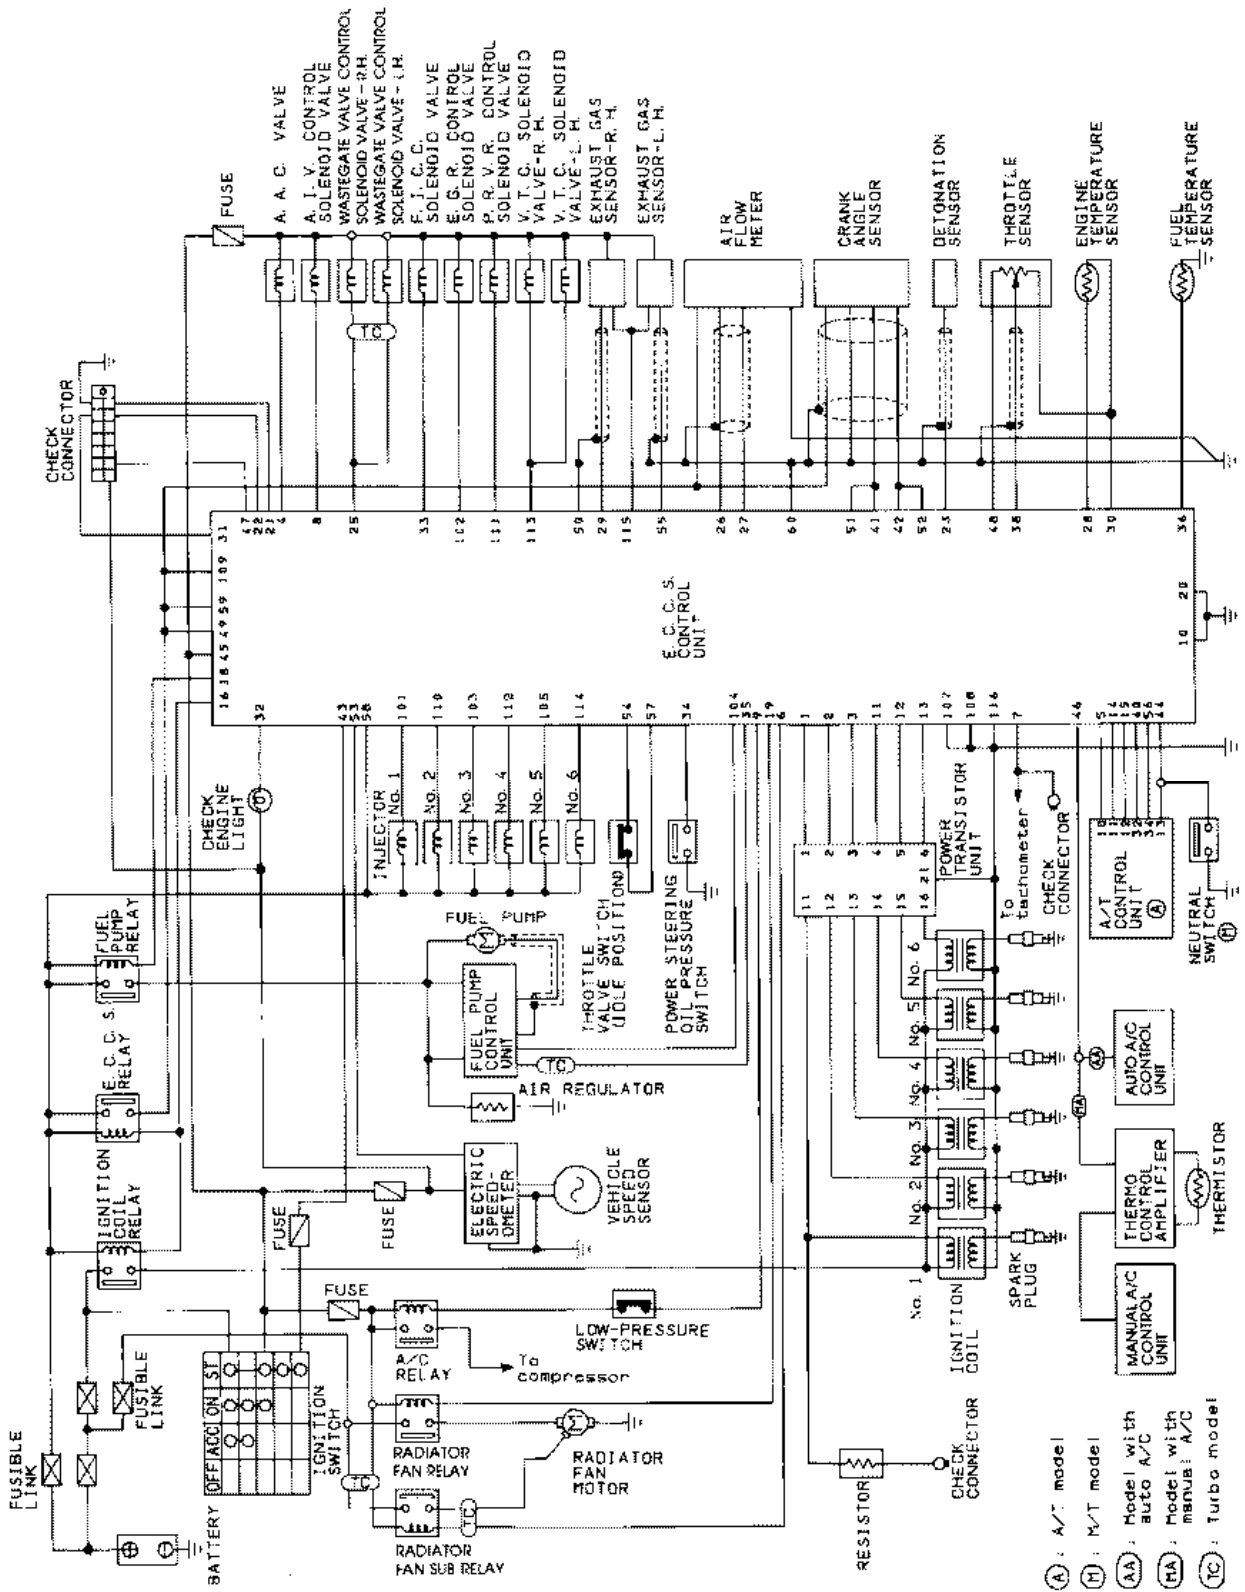

- (A) : A/T model
- (M) : M/T model
- (AA) : Model with auto A/C
- (MA) : Model with manual A/C
- (TC) : Turbo model

RB25DE / RB25DET ENGINE

1. CIRCUIT DIAGRAM (RB25DE / RB25DET)

