


1. AAC Valve
2. Injector
3. EGR Valve
4. BPT Valve
5. AIV Control Solenoid
6. EGR Temperature Sensor (Calif.)
7. Fuel Pressure Regulator
8. Throttle Position Sensor
9. Power Transistor
10. Ignition Coil
11. Fuel Filter
12. Charcoal Canister
13. FICD Solenoid
14. Engine Temperature Sensor
15. Air Regulator
16. Detonation/Knock Sensor
17. Oxygen (O₂) Sensor
18. AIV Valve
19. EGR/Canister Control Solenoid
20. Crank Angle Sensor (In Distributor)
21. Airflow Meter

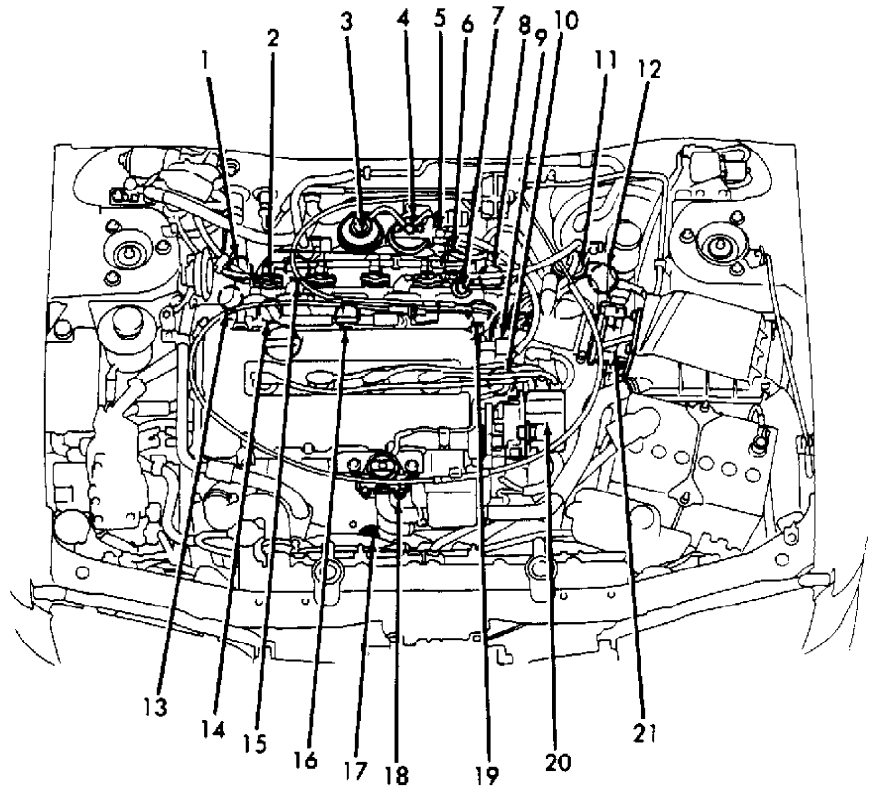


Airflow Meter

Between air duct and air cleaner housing.

ABS Wheel Sensors

On each wheel hub assembly.

1. AAC Valve
2. Injector
3. EGR Valve
4. BPT Valve
5. AIV Control Solenoid
6. EGR Temperature Sensor (Calif.)
7. Fuel Pressure Regulator
8. Throttle Position Sensor
9. Power Transistor
10. Ignition Coil
11. Fuel Filter
12. Charcoal Canister
13. FICD Solenoid
14. Engine Temperature Sensor
15. Air Regulator
16. Detonation/Knock Sensor
17. Oxygen (O₂) Sensor
18. AIV Valve
19. EGR/Canister Control Solenoid
20. Crank Angle Sensor (In Distributor)
21. Airflow Meter

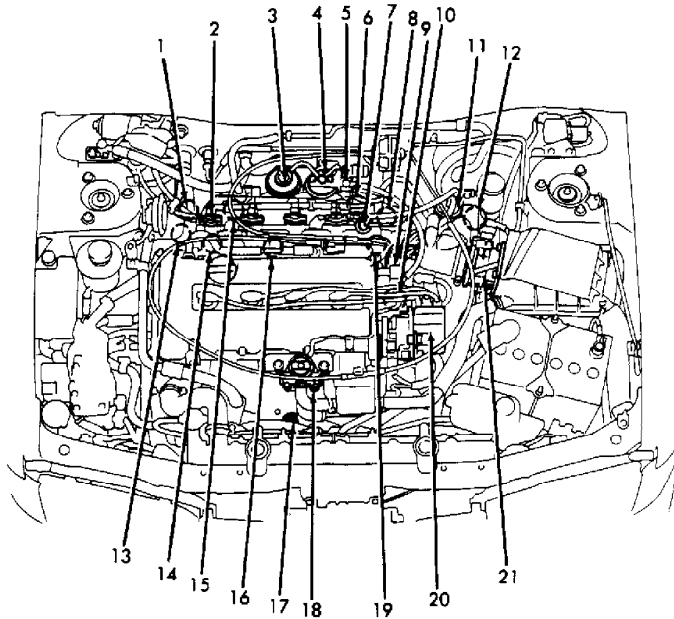

Crank Angle Sensor

Built into distributor.